

Diesel Heater Operation Instructions

- 1) Check Diesel Fuel Tanks levels add fuel as needed
- 2) Connect Heater Power cord to your car battery and leave your car running.
- 3) Place heater plugs in plane



- 4) Press the “ON” buttons on BOTH heater remote (remotes shown below)

Note: heaters will announce it is turned on.

Press the Plus + button five time to set heat to its highest setting. Do this for both heaters



Make sure the led light as shown in the right picture goes off. If it remains on it means one of the button are stuck on. You may have to push the stuck button again to free it.

- 5) Preheat per Grasshopper operational intructions
- 6) When preheating is completed press off button on both remotes leave connected to car battery until next step is completed
- 7) **Pre heaters required a 5 mins cool down after 'OFF' buttons are pressed and will turn off automatically**